


Remove Silent Hitch Pins [A], Rubber Bumpers [B], Spring Nuts [C], Washers [D], and Retainer Clip [F] from your existing Lets Go Aero Cargo Carrier Spine. Reinstall all hardware except Silent Hitch Pins & Washers into the same locations on the new FlatPipe Spine.



Slide the shank into the receiver hitch aligning the mounting hole with the hole in the receiver hitch. Attach with Silent Hitch Pin and a washer by threading the pin into the spring nut. Using the TwinTube Frame from your existing cargo carrier slide the two female tubes underneath the rack onto the Spine's male tubes. Align the rack and the Spine's rearward holes to confirm correct installation. Insert the Hand-Tighten Silent Hitch Pin with Handle on rearward tube containing the Spring Nut inside the of Spine Assembly. Tighten firmly to engage the threading tightly and apply retainer clip.

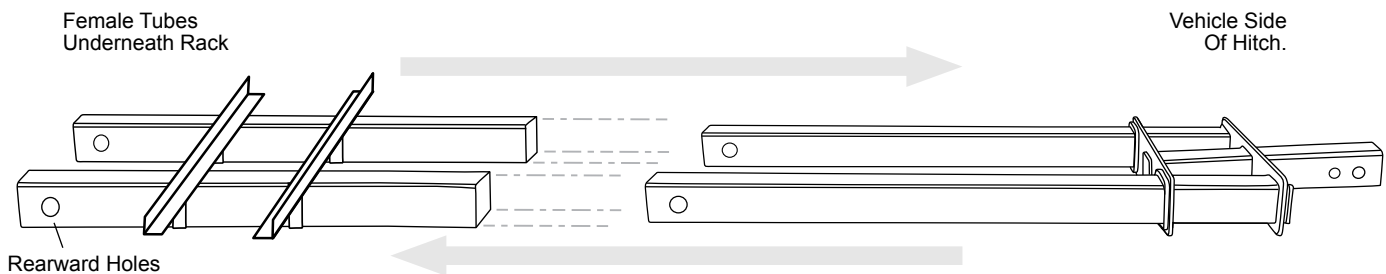

WARNING

Silent Hitch Pins must be tightened to specification for proper function. Failure to do so may result in potential hazards from improper operation, including property damage and bodily injury. Tighten the Silent Hitch Pin at the hitch connection with a wrench to 30 ft. lbs torque; the version with handle may be engaged at either rear spine tube at user's discretion and tightened firmly. Apply hair pin clips to both pins once tightened. Hand-tighten pin must always be engaged before transit; never operate vehicle with TwinTube platform in slide out position.